



# 青岛创梦仪器有限公司

Qingdao ChuangMeng Instrument Co., Ltd.



### 水泥浆静态滤失仪 Cement Slurry Static Filter Press

型号 Model:1215

使用手册

**Instruction Manual** 

版本 1.0 Version 1.0 ©版权所有 青岛创梦仪器有限公司 ©Copyright owned by Qingdao ChuangMeng Instrument Co., Ltd



请你仔细阅读《使用手册》,正确掌握本产品的安装和使用方法。阅读后请将本《使用手册》妥善保管,以备今后进行检修和维护时使用。

Carefully read this User Manual to learn how to install and use the product correctly. After reading, properly keep the User Manual as a reference for future maintenance and repair.

#### 联系方式 Contact:

邮编 Zip code: 266100

网址 Website: www.qdcmyq.com

电话 Tel: 86-0532-66993768

传真 Fax: 86-0532-66993744

邮箱 E-mail: cmtech@sina.com

公司地址:中国青岛市市北区温州路7号

生产基地: 青岛市城阳区流亭街道兴海路3号

Address: No. 7 Wenzhou Road, City Northern District, Qingdao City, China

Production base: No. 3 Xinghai Road, Liuting Street, Chengyang District, Qingdao

#### Контакт:

Почтовый индекс: 266100

Телефон: 86-0532-66993768

Электронная почта: cmtech@sina.com

Адрес: Но. 7, УЛ. Вэньчжоу, Район Север города, Г. Циндао, Китай

Производственная база: Но. 3, УЛ. Синхай, Пр. Лютин, Район Чэнян, Г. Циндао, Кит



#### 1、概述 Introduction

水泥浆静态滤失仪是测量水泥浆在高温高压条件下滤失量的同时可制取,滤失后形成的滤饼。本仪器整体设计采用加热和控制系统一体,主要部件均采用优质不锈钢,操作方便,移动灵活,表面精制坚固耐用。温度控制系统采用目前国际最先进的电子温控器,具有控温精度高,重复性好,操作简单,测试数据准确等特点。非常适用于各油田、科研院所的实验室使用。

Cement slurry static filter press is used to measure the loss of cement slurry under high temperature and pressure, and to make filter cake after. The whole design of the instrument adopts heating and control system. The main parts are made of high quality stainless steel. It is easy to operate, flexible to move, and its surface is refined, firm and durable. The temperature control system adopts the most advanced electronic temperature controller in the world. It has the characteristics of high temperature control accuracy, good repeatability, simple operation and accurate test data. It is very suitable for laboratory use in oil fields and scientific research institutes.

### 2、型号和参数 Model and technical parameter

| 型号    | 名称                                | 配件         |
|-------|-----------------------------------|------------|
| Model | Name                              | Parts      |
| 1215  | 水泥浆静态滤失仪                          | 钻井液杯       |
| 1213  | Cement slurry static filter press | Slurry cup |



## 3、仪器结构及原理 Instrument structure and principle

| 名称                                  | 技术参数   |  |  |  |  |
|-------------------------------------|--|--|--|--|--|
| Name                                | Technical parameter                              |  |  |  |  |
| 电源                                  | 220V ± 50/ 50/60Uz                               |  |  |  |  |
| Power                               | $220V \pm 5\%  50/60Hz$                          |  |  |  |  |
| 加热功率                                | 1500W  |  |  |  |  |
| Heating power                       | 1300W  |  |  |  |  |
| 最高工作温度                              | <b>宏祖区 222℃</b>                                  |  |  |  |  |
| Maximum working temperature         | 室温至 232℃   |  |  |  |  |
| 浆杯最大工作压力                            | OMDo   |  |  |  |  |
| Slurry cup 's pressure              | 8MPa   |  |  |  |  |
| 滤液接收器最大压力                           | 4MPa   |  |  |  |  |
| Maximum Pressure of Filter Receiver | 4WIFa  |  |  |  |  |
| 有效过滤面积                              | 22.6cm2  |  |  |  |  |
| Effective filtration area           | 22.00112   |  |  |  |  |
| 气源                                  | 氮气、二氧化碳气体 (不含油、水等杂质)                             |  |  |  |  |
|                                     | Nitrogen, carbon dioxide (free of oil, water and |  |  |  |  |
| Air supply                          | other impurities)                                |  |  |  |  |


## 4、仪器结构及原理 Instrument structure and principle

- 1、主机:由底座、立柱、加热系统等组成,是仪器的主体组件。
- 2、三通组件:用来连接输气管和连通阀杆。可放掉管汇系统内余气。
- 3、浆杯:容量为500ml、耐腐蚀的不锈钢容器。
- 4、回压接收器组件:是用来接收滤液,调节接收器内压力用。
- 1. Main engine: It is composed of base, pillar, heating system and so on. It is the main component of the instrument.
- 2. Three-way assembly: used to connect gas pipeline and connecting valve stem. Remaining gas in manifold system can be released.
- 3. Slurry cup: stainless steel container with capacity of 500 ml and




corrosion resistance.

4. Backpressure Receiver assembly: It is used to receive filtrate and regulate the pressure in the receiver.

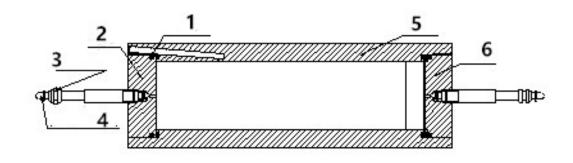

| 1 | "0"形圈/"0"-ring   | 4 | 连通阀杆/Valve stem |
|---|------------------|---|-----------------|
| 2 | 杯底/Bottom of cup | 5 | 杯体/Cup body     |
| 3 | "0"形圈/"0"-ring   | 6 | 杯盖/Cup cover    |

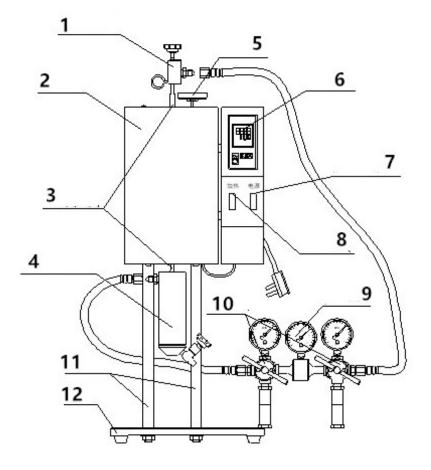




| 1 | 三通组件/Three-way assembly      | 7  | 加热开关/Heating switch           |
|---|------------------------------|----|-------------------------------|
| 2 | 加热套/Heating sleeve           | 8  | 电源开关/Power switch             |
| 3 | 连通阀杆/Valve stem              | 9  | 压力表/Pressure gauge            |
| 4 | 回压接收器/Back pressure receiver | 10 | 调压阀/Pressure regulating valve |
| 5 | 温度计/Thermometer              | 11 | 立柱/Column                     |
| 6 | 温控器/Thermostat               | 12 | 底座/Base                       |





# 5、仪器的操作 The operation of the instrument:

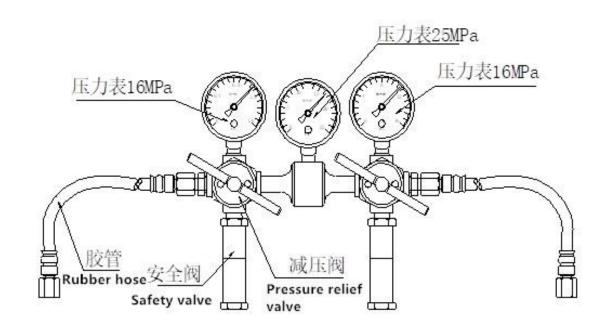

#### 警告:设置键"O"非本厂技术人员严禁触碰。

- 1、将加热套和相应电压电源接通,将温度计插入温度计孔。将加温套加热至比选定的测量温度高  $10^{\circ}$  F  $(6^{\circ}$  C),在整个测试过程中用恒温器保持温度恒定。
- 2、将样品搅拌 10min。
- 3、将样品装入浆杯,注意样品液面不要超过 405ml,即样品注入量不得多于杯中距顶盖 37mm 处杯刻线。放上滤纸,上好浆杯。
- 4、浆杯的上端和下端气阀关闭,反把浆杯放入加热套。将温度计插入温度计孔 中。
- 5、将加压管汇与上、下二气阀连接,并将其销住。在气阀关闭状态下将上、下管汇施加 0.7MPa 和推荐的回压的。打开上端气阀,通入气压,并加温至选定的温度。
- 6、当温度达到设定的温度时,将上端气压加至 950psi(6550kPa),打开下端气



阀。在 30 min 的整个测量过程中,保持预先设定的温度(±3℃),收集滤液。在测量过程中使下端压力保持在 450psi(3103kPa),若下端回压超过 450 psi,泄放一些滤液,以放掉一些回压。记下测量温度和压力下的滤液体积的毫升数。样品在杯中加热的时间不应超过 1h。

- 7、标准过滤面积为 7.0 in², 如过滤面积为 3.5 in² (22.6 cm²),将滤液体积乘
- 2,记入记录。
- 8、在测量接近结束后,关闭上下二气阀,拔掉"T"型销,释放调压器中的气压。
- 9、以毫米或 1/32 in 为记录单位,量测泥饼厚度,并描述泥饼质量。

注意:液杯中将仍有 500 psi (3448kPa)的气压。要使液杯保持在垂直状态,直至冷却至室温。

Warning: Setting key "O" is strictly forbidden to touch by non-factory technicians.

- 1. Connect the heating sleeve with the corresponding voltage power supply and insert the thermometer into the thermometer hole. The heating sleeve is heated to  $10^{\circ} \text{F}$  (6°C) higher than the selected measuring temperature, and the temperature is kept constant by a thermostat during the whole testing process.
- 2. Stir the sample for 10 minutes.
- 3. Put the sample into the slurry cup and note that the liquid level of the sample should not exceed 405 ml, that is to say, the injection amount of the sample should not exceed the calibration mark of the cup at 37 mm from the middle of the cup to the top. Put on the filter paper and put on the slurry cup.





- 4. The upper and lower valves of the slurry cup are closed, and the slurry cup is put into the heating sleeve in the opposite direction. Insert the thermometer into the thermometer hole.
- 5. Connect the pressure manifold with the upper and lower two-valve and pin it. When the valve is closed, the upper and lower manifolds are applied with 0.7 MPa and recommended backpressure. Open the upper end valve, let in the air pressure, and heat to the selected temperature.
- 6. When the temperature reaches the set temperature, add the upper air pressure to 950 psi (6550 kPa) and open the lower air valve. During the whole measurement process for 30 minutes, the filtrate was collected at a pre-set temperature ( $\pm 3^{\circ}$ C). During the measurement, the lower pressure is kept at 450psi (3103kPa). If the lower pressure exceeds 450psi, some filtrate is released to release some of the back pressure. Note the milliliters of filtrate volume measured at temperature and pressure. The sample should not be heated in the cup for more than 1 hour.
- 7. The standard filtration area is  $7.0 \text{in}^2$ . If the filtration area is  $3.5 \text{in}^2$  (22.6cm<sup>2</sup>), the volume of filtrate is multiplied by 2 and recorded.
- 8. Close the upper and lower gas valves, pull out the "T" pins and release the pressure in the regulator after the measurement is close.
- 9. The mud cake thickness was measured and the mud cake quality was described in millimeter or 1/32in.

Note: There will still be 500 psi (3448 kPa) pressure in the liquid cup.

Keep the cup in a vertical position until it is cooled to room temperature.



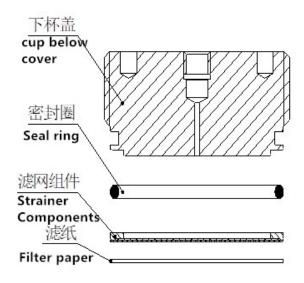

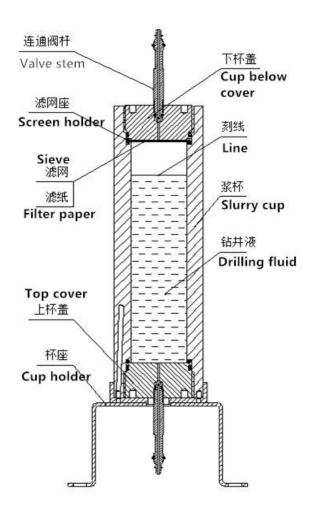



### 6、维护与保养 Maintenance

- 1、清洗各部件并干燥待用, 仪器置于干燥环境中。确保通气孔内清洁。"0"型 圈和滤网未变形、无破损, 密封面无损伤。
- 2、移动或保养仪器时。要轻拿、轻放,以免造成部件变形影响精度和使用。
- 3、放置时要将调压手柄处于自由状态。调压手柄螺栓处,应定期旋下涂抹润滑脂,以免生锈,造成调压失灵。
- 4、调节压力时不能将压力调至超过压力表总量程的 2/3,逐渐加压,不得敲击压力表。
- 5、仪器使用结束后,应将各部件内的压力、气体释放干净。泄压后方可打开浆 杯清洗干燥。
- 6、输气管禁止与腐蚀性介质接触,不得敲击和划伤。
- 7、气源严禁使用氧气。
- 1. Clean the parts and dry them for use. The instrument is placed in a dry environment. Make sure the ventilation holes are clean. "0"-rings and filters are not deformed and damaged, and the sealing surface is not damaged.
- 2. When moving, repairing or maintaining instruments. It should be handled and handled lightly so as not to cause parts to deform and affect accuracy and use.
- 3. Place the pressure regulating handle in a free state. At the bolt of the pressure regulating handle, the grease should be screwed off regularly to avoid rusting and pressure regulating failure.



- 4. When adjusting the pressure, the pressure should not be adjusted to 2/3 of the total range of the pressure gauge. Gradually, the pressure should be increased and the pressure gauge should not be tapped.
- 5. After the use of the instrument, the pressure and gas in each component should be released clean. After pressure relief, the slurry cup can be opened for cleaning and drying.
- 6. Gas pipelines shall not be exposed to corrosive media and shall not be knocked or scratched.
- 7. The use of oxygen is strictly prohibited.



# 7、故障的判定与排除 Diagnosis and Elimination of Faults

| 故障                               | 原因                                    | 维修方法                                    |  |
|----------------------------------|---------------------------------------|---|--|
| Fault                            | Reason                                | Maintenance method                      |  |
| 滤失实验时,样品从连通阀杆滴口<br>处溢出           |                                       |   |  |
| During the filtration test, the  | 滤网破损                                  | 更换双层滤网                                  |  |
| sample overflows from the        | Filter screen damage                  | Replace double-layer filter screen      |  |
| droplet of the connecting valve  |                                       |   |  |
| stem.                            |                                       |   |  |
| 加热套达到实验温度,放入浆杯后                  | 1. 杯盖安装不妥。使杯盖没达到完全密封。                 | 1. 重新安装杯盖调整紧定螺钉。达到端面                    |  |
| 套内发出声响,并伴有金属撞击声                  | 2. 连通阀杆"0"型圈老化或破损                     | 密封效果。                                   |  |
| 是因液体从盖端渗漏造成                      | 3. 杯内"0"型圈老化或破损.                      | 2. 更换"0"型圈                              |  |
| When the heating sleeve reaches  | 1. Installation of cup cap is         | 3. 更换"0"型圈                              |  |
| the experimental temperature,    | inappropriate. Make the cup cover not | 1. Re-install the adjusting and         |  |
| the sound is emitted in the back | completely sealed.                    | tightening screw of the cup cover. To   |  |
| sleeve of the slurry cup,        | 2. Aging or Damage of Connected Stem  | achieve the end sealing effect.         |  |
| accompanied by metal impact,     | Type "0" Ring                         | 2. Replace "0" -ring                    |  |
| which is caused by the leakage   | 3. Aging or Damage of "0" Ring in Cup | 3. Replace "0" -ring                    |  |
| of liquid from the cover end.    |                                       |   |  |
|                                  | 1. 电源插座未插好                            | 1. 重新按装电源插座使其接触良好                       |  |
| 打开电源开关指示灯不亮                      | 2. 熔断丝烧断                              | 2. 更换熔断丝                                |  |
| Turn on the power switch and the | 1. The power outlet is not plugged in | 1. Re-press the power outlet to make it |  |
| indicator does not turn on       | properly.                             | in good contact.                        |  |
|                                  | 2. fuse break.                        | 2. Replace fuse.                        |  |
|                                  |                                       | 1. 找出断线点重新接入                            |  |
| <br>  按启动按钮,无指示信号                | 1. 线路开路                               | 2. 更换同型号继电器                             |  |
| Press start button, no           | 2. 继电器损坏                              | 1. Find out the breakpoint and          |  |
| indication signal                | 1. Open circuit                       | re-access it.                           |  |
| indication dignar                | 2. Relay damage                       | 2. Replacement of the same type of      |  |
|                                  |                                       | relay                                   |  |
|                                  |                                       | 打开加热壳底盖,取出保温层,更换已烧                      |  |
| 升温太慢                             | 加热棒有烧坏现象                              | 坏的加热棒.                                  |  |
| Heating too slowly               | Burn-out of heating rod               | Open the bottom cover of the heating    |  |
| nearing too slowly               | barn out of heaving for               | shell, remove the insulation layer and  |  |
|                                  |                                       | replace the burnt heating rod.          |  |
| 如何鉴别连通阀杆的好坏                      |                                       |   |  |
| How to Identify Connected Stem   | 尖端有凹槽 尖端                              | 不好<br>端有凹陷 好<br>ad Good                 |  |
|                                  | Dau Di                                |   |  |



# 8、一年备件(选购)One year spare parts (selected)

| 编号       | 名称及规格                               | 数量       | 备注      |
|----------|-------------------------------------|----------|---------|
| Numbered | Name and specification              | Quantity | Remarks |
|          | 内六角锥端紧定螺钉                           | 30       |         |
| S0191    | Hexagon socket set screws with cone |          |         |
|          | point                               |          |         |
| 121002   | 连通阀杆                                | 10       |         |
| 121002   | Valve stem                          |          |         |
| P0302    | 988 滤纸                              | 5        |         |
| F0302    | Filter paper                        |          |         |
| P0314    | 双金属温度计                              | 1        |         |
| 10314    | Bimetallic thermometer              |          |         |
| S0501    | "0"型圈(φ 6×1.8)                      | 50       |         |
| 50501    | 0-ring ( <b>φ</b> 6×1.8)            |          |         |
| S0502    | "0"型圈(φ 8×1.8)                      | 50       |         |
| 30302    | 0-ring ( <b>φ</b> 8×1.8)            |          |         |
| S0551    | "0"型圈(φ 37×1.8)                     | 50       |         |
| 50001    | 0-ring ( <b>φ</b> 37×1.8)           |          |         |
| S0508    | "0"型圈(φ 64×3.5)                     | 50       |         |
| 30306    | 0-ring ( <b>φ</b> 64×3.5)           |          |         |
|          | 保险丝                                 | 30       |         |
|          | Fuse                                |          |         |
| G0106    | 量筒(25ml)                            | 10       |         |
| 00100    | Measuring cylinder (25ml)           |          |         |

#### 对不同实验温度推荐的始压和回压

Initial and backpressure recommended for different experimental temperatures

| 温 度<br>Temperature |         | 始 压(样品室压力)               |                      | 回 压 (接收室压力)      |                                |                  |     |  |
|--------------------|---------|--------------------------|----------------------|------------------|--------------------------------|------------------|-----|--|
|                    |         | Initial pressure (sample |                      |                  | Backpressure (Receiver Chamber |                  |     |  |
|                    |         | chamber pressure)        |                      |                  | Pressure)                      |                  |     |  |
| $^{\circ}$ C       | F       | MPa                      | Kg•f/cm <sup>2</sup> | 磅/时 <sup>2</sup> | MPa                            | MPa Kg•f/cm² 磅/吋 |     |  |
| <94                | <200    | 3.15                     | 35.15                | 500              | 0                              | 0                | 0   |  |
| 94~149             | 200~300 | 4.14                     | 42.18                | 600              | 0.67                           | 7.0              | 100 |  |
| 149~177            | 301~350 | 4.48                     | 45.70                | 650              | 1.03                           | 10.5             | 150 |  |
| 177~190.5          | 351~375 | 4.82                     | 49.20                | 700              | 1.37                           | 14.0             | 200 |  |
| 191~204.5          | 376~400 | 5.17                     | 52.73                | 750              | 1.73                           | 17.6             | 250 |  |
| 205~218            | 401~425 | 5.86                     | 59.75                | 850              | 2.40                           | 24.6             | 350 |  |
| 218.9~232          | 426~450 | 6.55                     | 66.80                | 950              | 3.10                           | 31.6             | 450 |  |
| 232.8~246          | 451~475 | 7.24                     | 73.80                | 1050             | 3.80                           | 38.7             | 550 |  |
| 246.7~260          | 476~500 | 8.27                     | 84.36                | 1200             | 4.82                           | 49.2             | 700 |  |



# 青岛创梦仪器有限公司 装箱单

# Qingdao Chuangmeng Instrument Co., Ltd. Packing list

生产企业: 青岛创梦仪器有限公司

Manufacturing enterprise: Qingdao Chuangmeng Instrument Co.,Ltd.

生产地址:青岛市城阳区流亭街道兴海路3号

Production address: No. 3 Xinghai Road, Liuting Street, Chengyang District, Qingdao

主机型号:

Model of the main motor:

出厂编号:

Manufacturing No:

| 序号 |    |                                   | 数量       | 备注      |
|----|----|-----------------------------------|----------|---------|
| No | 编号 | Name and specification            | Quantity | Remarks |
| 1  |    | 主机 Main engine                    | 1        |         |
| 2  |    | 管汇 Mainifold                      | 1        |         |
| 3  |    | 高温高压滤纸 HTHP filter paper          | 1        |         |
| 4  |    | 回压接收器 Backpressure receiver       | 1        |         |
| 5  |    | 浆杯 Sluryy cup                     | 1        |         |
| 6  |    | 连通阀杆 Valve stem                   | 2        |         |
| 7  |    | 三通阀 Three-way valve               | 1        |         |
| 8  |    | 杯座 Cup base                       | 1        |         |
| 9  |    | 量筒 Measuring cylinder(25ml)       | 1        |         |
| 10 |    | 温度表 Thermometer(0~250℃)           | 1        |         |
| 11 |    | 专用扳手 Special spanner              | 1        |         |
| 12 |    | 内六角扳手 Inner hexagon spanner (4mm) | 1        |         |
| 13 |    | 呆扳手 Wrench(14-17mm)               | 1        |         |
| 14 |    | 呆板手 Wrench(7mm)                   | 1        |         |
| 15 |    | 双层滤网 Double screen                | 1        |         |
| 16 |    | "O"型圈 O-ring (φ 8×1.8)            | 10       |         |
| 17 |    | "O"型圈 O-ring (φ 37×1.8)           | 1        |         |
| 18 |    | "O"型圈 O-ring (φ 64×3.5)           | 5        |         |
| 19 |    | 电源线 Power cord                    | 1        |         |
| 20 |    | 使用手册 Manual Instruction           | 1        |         |
| 21 |    | 合格证 Certificate                   | 1        |         |



